

Update Manual

for Touch Terminals



Version: V6.20160405



30322535-02-EN-300

Read and follow these operating instructions.

Keep these operating instructions in a safe place for later reference.

Company details

Document

Update Manual
Product: for Touch Terminals
Document number: 30322535-02-EN-300
For software version: V02.10.19
Original language: German

Copyright ©

Müller-Elektronik GmbH & Co.KG
Franz-Kleine-Straße 18
33154 Salzkotten
Germany
Phone: ++49 (0) 5258 / 9834 - 0
Fax: ++49 (0) 5258 / 9834 - 90
Email: info@mueller-elektronik.de
Homepage: <http://www.mueller-elektronik.de>

Contents

1	About the update	4
2	Saving your settings on the terminal	5
3	Updating the terminal	6


1 About the update



During the update, a new version of the software will be installed on the terminal. The old software will be permanently overwritten during this process.

The software of the job computers connected will not be updated.

You can see the installed software version in the top left of the start menu of the Service application:

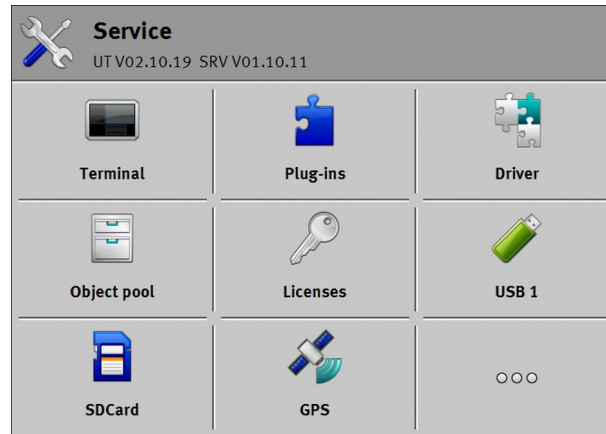

NOTICE

It is not possible to downgrade the software

After installing the new software version, the old software version can no longer be restored.

NOTICE

Wrong USB memory device might cause data loss


- Use only black USB memory devices provided by Müller-Elektronik.

2 Saving your settings on the terminal

ISOBUS-TC

If you use the ISOBUS-TC application, you will need to transfer all tasks from the SD card to a USB memory device before the update. This will prevent you from losing your data.

Procedure

1. To call up the application, tap on this symbol in the selection menu: 
2. Insert a USB memory device into the terminal and tap on "Log off" in the ISOBUS-TC application.
 - ⇒ The taskdata.xml file will be transferred from the SD card to the USB memory device.

After the update, you must configure the following parameters in the ISOBUS-TC application:

- "Work with ISO-XML?"

3 Updating the terminal


NOTICE


Virus scanners can corrupt the file

- Switch off your virus scanner before starting the installation.

Procedure

- You have an empty USB memory device.
 - You have the update file on your PC.
1. Unpack the file on the USB memory device. To do so, execute the file.
⇒ The "7-zip self-extracting archive" window will appear.
 2. Click on "..."
 3. Select the empty USB memory device as your save location.

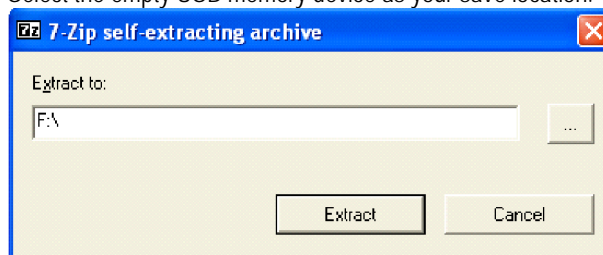

4. Click on "Extract".
5. Wait until the installation is complete.
6. Insert a USB memory device into the terminal.
7.  - Start the terminal.
⇒ The installation wizard will start.
8. Select a language for the installation wizard.
9. Tap "Continue".
10. Follow the instructions on the display screen until the update is completed.